




EUS-2 Overfill Prevention Controller

Configuration options with truck connecting plug and cable assembly

a) with **quick release/ breakaway** junction box and socket for detecting the 'truck plug in **park position**' status:

b) rack monitor with **direct connected** truck plug and cable assembly:

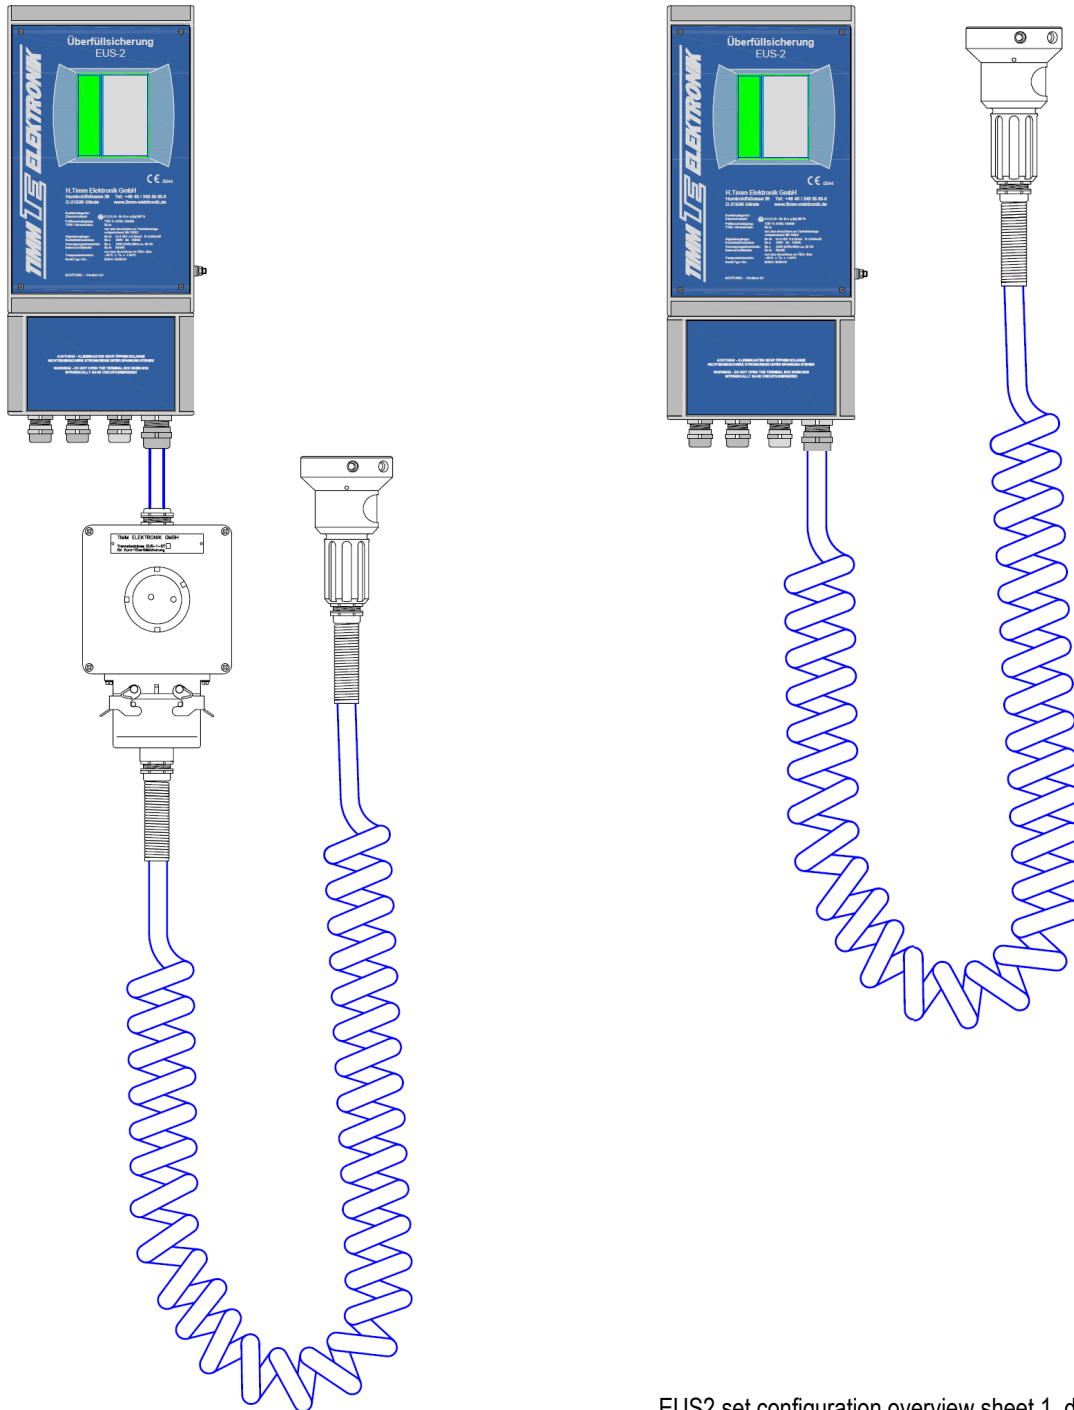

EUS2 set configuration overview sheet 1, dated 24.07.2017