





## EUS-2 Overfill Prevention Controller

Options with dual junction boxes for both types of truck plugs: 10 pole/4 pins & 6 pole/3 pins.  
Please note, it is not possible to use both plugs simultaneously.

a) dual junction box with **quick release/breakaway** and socket for detecting the 'truck plug in **park position**' status:

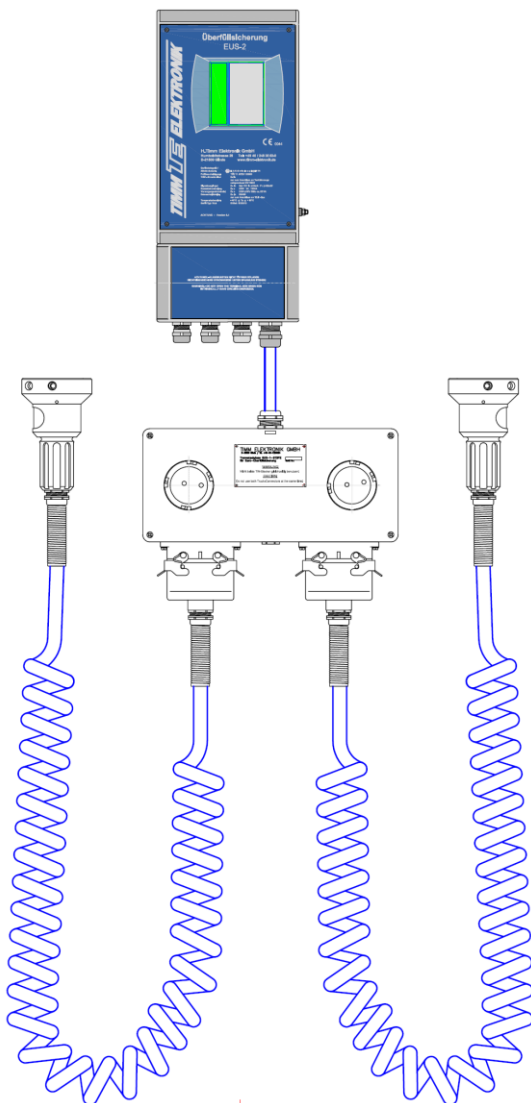

b) dual junction box with **direct connected** truck plug and cable assembly:

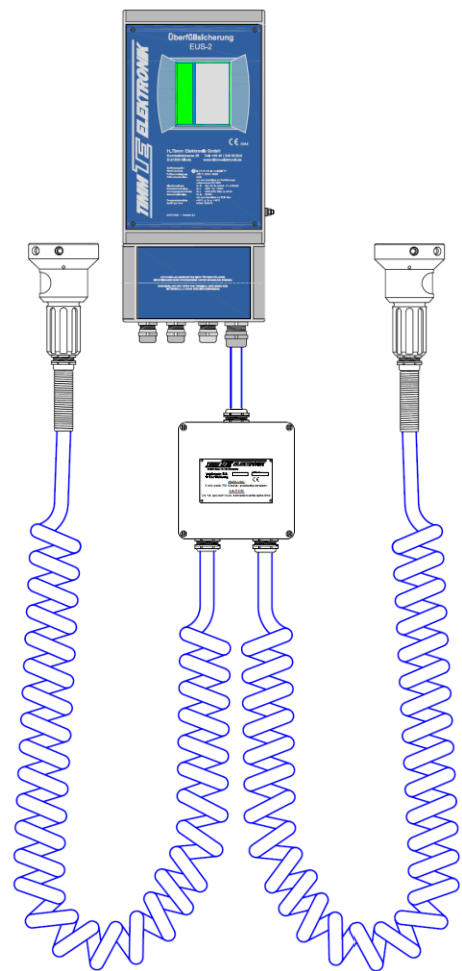

EUS2 set configuration overview sheet 2, dated 02.08.2017